 




# USER'S MANUAL

LED TV

**32HLE4000S**

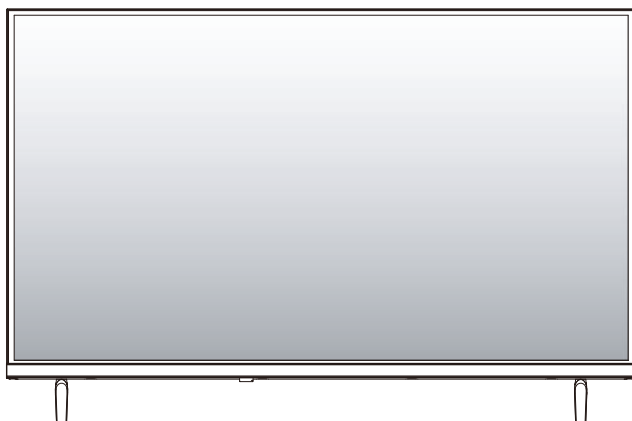

*Enjoy it.*

UNION DISTRIBUTION S.R.O.  
NA STRŽI 1702/65, 140 00 PRAGUE 4, CZECH REPUBLIC

Please read this manual carefully for proper usage before instalation. It is recommended to keep this manual properly for future check. The pictures provided in this manual are only for your reference.



© All rights reserved

# 01-13

## English

# CONTENTS



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



Figures and illustrations in this Operation Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

## Help

The Help feature offers a lot of information about your TV operation. To use the Help feature, press the Home button, and then use the arrow and OK buttons to access to the Help menu. You can find how to troubleshoot from the list or keyword search. If you update APK, the Help feature and information will be updated.

## Package

|    |                                    |   |
|----|------------------------------------|---|
| 1. | LED TV.                            | 1 |
| 2. | Remote control.                    | 1 |
| 3. | Stands (Group).                    | 2 |
| 4. | User Manual.                       | 1 |
| 5. | Screw (Group).                     | 1 |
| 6. | Remote control battery.            | 2 |
| 7. | Individual packing container, set. | 1 |

Dear customer, before operating, please read all these safety and operating instructions completely and then retain this manual for future reference. Always comply with the following precautions to avoid dangerous situations and ensure peak performance of your product.

|                                                                                                                                                                |                                                                                                                                                                                                                                                                      |                                                                                   |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|                                                                               | <b>CAUTION</b><br>RISK OF ELECTRIC SHOCK<br>DO NOT OPEN                                                                                                                                                                                                              |  |
| <b>WARNING:</b><br>TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL. |                                                                                                                                                                                                                                                                      |                                                                                   |
|                                                                              | The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock. |                                                                                   |
|                                                                              | The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.                                                     |                                                                                   |

## Regulatory information

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

## CAUTION

- × **Do not attempt to modify this product in any way without written authorization from supplier. Unauthorized modification could void the user's authority to operate this product.**
- × **Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.**

## IMPORTANT WARNINGS AND CAUTION

 
 
 
 
Electrical energy can perform many useful functions, but it can also cause personal injuries and property damage if improperly handled. This product has been engineered and manufactured with the highest priority on safety. BUT IMPROPER USE CAN RESULT IN POTENTIAL ELECTRICAL SHOCK OR FIRE HAZARD. In order to prevent potential danger, please observe the following instructions when installing, operating and cleaning the product.


- 1. Attachments** – Only use attachments/accessories specified by the manufacturer. Do not use attachments not recommended by the manufacturer. Use of improper attachments can result in accidents.
- 2. Water** – To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- 3. Fire or explosion** – Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the TV set.
- Warning:** To prevent the spread of fire, keep candles or other open flames away from this product at all times.
- 4. Ventilation** – When you install your TV, maintain a distance of at least 4 inches between the TV and other objects (walls, cabinet sides, etc.) to ensure proper ventilation. Failing to maintain proper ventilation may result in a fire or a problem with the product caused by an increase in its internal temperature.
- 5. ** This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- 6. Power source** – This product is intended to be supplied by a listed power supply indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
- 7. Overloading** – Do not overload wall outlets, extension cables, or convenience receptacles on other equipment as this can result in a risk of fire or electric shock.
- 8. Voltage** – Before installing this TV set, make sure your outlet voltage corresponds to the voltage stated on the appliance rating label.
- 9. Power plug** – Do not defeat the safety purpose of the polarized or grounding-type plug. Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits.
- 10. The MAINS plug** of the apparatus is used as the disconnect device, the disconnect device shall remain readily operable. Keep you AC power socket close to you TV for easy plugging and unplugging.
- 11. Wall mounting**—When mounting the product on a wall, be sure to install the product according to the method recommended by the manufacturer. This is a safety feature.
- 12. Stand** – Do not place the product on an unstable trolley, stand, tripod or table. Placing the product on an unstable base can cause the product to fall, resulting in serious personal injuries as well as damage to the product. Always place the TV on furniture that can safely support the TV. Make sure the ends of the TV do not overhang the edge of the supporting furniture.
- 13. Entering of objects and liquids** – Never insert an object into the product through vents or openings. High voltage flows in the product, and inserting an object can cause electric shock and/or short internal parts. For the same reason, do not spill water or liquid on the product.
- 14. Damage requiring service** – This unit should only be serviced by an authorized and properly trained technician. Opening the cover or other attempts by the user to service this unit may result in serious injury or death from electrical shock, and may increase the risk of fire.
- 15. Replacement parts** – In case the product needs replacement parts, make sure that the service person uses replacement parts specified by the manufacturer, or those with the same characteristics and performance as the original parts. Use of unauthorized parts can result in fire, electric shock and/or other danger.

- 16. Safety checks** – Upon completion of service or repair work, request the service technician to perform safety checks to ensure that the product is in proper operating condition.
- 17. Children** – Do not allow young children to play with the plastic bag that came with the television when you unpacked it. Failure to do so can result in suffocation, causing injury.
- 18. Batteries** – The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like. Do not dispose of any batteries in with the domestic waste. Return them to a collection point for old batteries.
- 19. Antenna** – Install the antenna away from high-voltage power lines and communication cables and make sure it is installed securely. If the antenna touches a power line, contact with the antenna could result in fire, electric shock or serious injury.
- 20. Panel protection** – The panel used in this product is made of glass. Therefore, it can break when the product is dropped or impacted upon by other objects. Be careful not to be injured by broken glass pieces in case the panel breaks.
- 21.** It is recommended not to use the product in places where there is oil smoke or steam that may damage the material of this product.
- 22. Operating conditions:** air temperature from 15 to 35 °C; humidity from 45 to 75%; atmospheric pressure from 86 to 106 to Pa (from 650 to 800 mm of mercury).
- 23. Transportation:** Packed TVs are allowed to be transported by all modes of transport air temperature from +50 to - 40 °C and humidity from 75 to 100%.
- 24. ~** It Indicates alternating current.  
 --- It Indicates direct current.

## Safety Instructions

### Important safety instructions
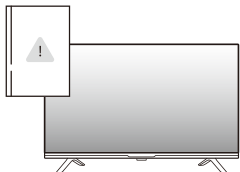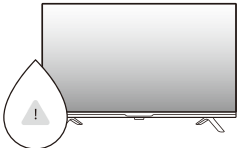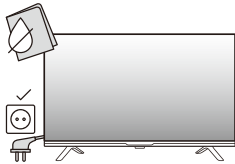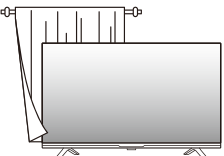
|                                                                                                                                                                                                                                           |                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1. Read these instructions.<br/>         2. Keep these instructions.<br/>         3. Heed all warnings.<br/>         4. Follow all instructions.</p>   | <p>5. Do not use this apparatus near water.</p>                                                                                                                                                                                                                                                                     |
| <p>6. Clean only with a dry cloth. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.</p>        | <p>7. Do not block any ventilation openings. Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains etc.</p>                                                                                                                                |
| <p>8. Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.</p>  | <p>9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.</p> |
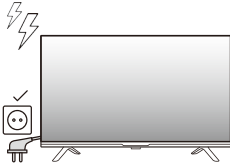 
|                                                                                                                                                                                                                                                                                                |                                                                                                                                                                                                                                                                                                                                                           |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.</p>                                                                                                                            | <p>11. Educate children about the dangers of climbing on furniture to reach TV controls.</p> <p>12. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Sudden stops, excessive force and uneven floor surfaces can cause the product to fall from the trolley.</p>                                |
| <p>13. For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the cable system.</p>  | <p>14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.</p> |

## NOTE

- ✗ **Disposal of this product must be carried out in accordance to the regulations of your local authority. Do not dispose of this product with general household waste disposal.**
- ✗ **Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product.**
- ✗ **Avoid touching the screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effect on the screen. It is not recommended**
- ✗ **It is not recommended to keep a certain still image displayed on the screen for a long time as well as displaying extremely bright images on screen, reduce the 'brightness' and 'contrast' when displaying still images.**
- ✗ **The product is in standby mode under the network function, and it takes 30 minutes to enter the stable state.**

## Safety Stability TV tips

The television set may fall, causing serious personal injury or death.

- ALWAYS use cabinets or stands or mounting methods recommended by the television set manufacturer.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled, or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

## Frameless model reminder tips

No matter the circumstances, please keep the TV panel vertically placed, if any tilt, the tilt angle between the panel and the vertical plane must not exceed 15° (the rule applies to frameless series products).

## Getting started

### Fitting the stand

 
Before you can install your TV set, you need to fit the stand. Alternatively, you can mount it on the wall. A Phillips screwdriver is needed to perform the installation.

### Setting up the TV set

Place your TV set on a flat, stable surface (e.g. a table or a specially designed TV stand). Make sure that all cables are laid simply and safely and do not represent a trip hazard. The device must be connected to a mains socket using the mains cable. This mains socket must be easily accessible so that the mains plug can be removed immediately in the event of an emergency. The attached power cord is for this model only.

### Fitting the batteries into the remote control

1. Turn the remote control over with its underside facing upwards, insert a finger into the recess, and push the battery compartment cover in the direction of the arrow. Remove the battery compartment cover.

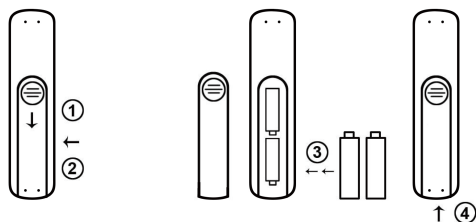

2. Insert the batteries supplied into the remote control. Make sure that you insert the batteries correctly with the polarity as shown inside the battery compartment.
3. Replace the battery compartment cover and push in the opposite direction to the arrow until it clicks into place.



**Caution:** Remove the batteries from the remote control if you are not going to use the device for an extended period of time. Otherwise, the remote control can be damaged by leaking battery acid.


## Controls and connections


 
### Caution:

Before connecting or disconnecting any cables, switch off all related devices (also the TV). Otherwise you could damage the devices.


## Back

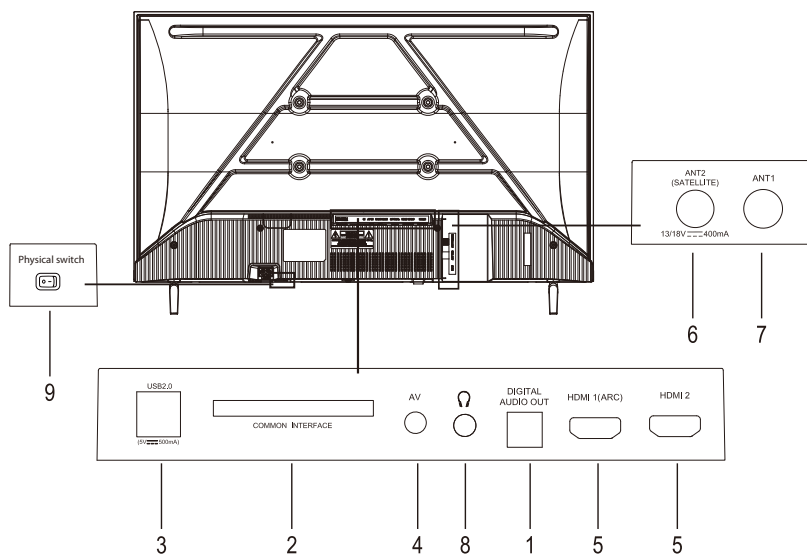

1. **DIGITAL AUDIO OUT:** Connect to an external digital audio device.
2. Common Interface slot.
3. **USB2.0:** USB port. Connector a USB Storage device for multimedia file playback.
4. **MINI AV:** AV audio/video signal input.
5. **HDMI:** HDMI (High-Definition Multimedia Interface) input. (HDMI2 supports eARC/ARC function).
6. **ANT2:** Connection for satellite antenna (ANT 2) (SATELLITE)
7. **ANT1:** For connection of the external antenna.
8. Headphone out: Earphones/ headphones jack.
9. Physical switch.

## Remote control

 Definition of the buttons on remote control:

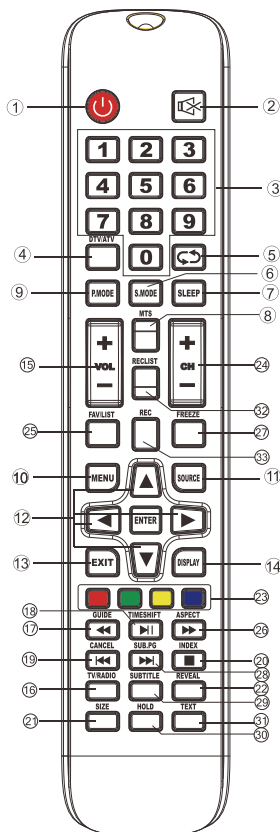


1. POWER: Set your TV to power on or standby mode.
2. MUTE: Press to mute the sound. Press again or press VOL+ to unmute.
3. 0-9: Press 0-9 to select a TV channel directly while watching TV. The channel will change after 2 seconds. Applicable for entering page number in teletext mode and so on.
4. DTV/ATV: Switch between Analog and Digital TV
5. Return to the previous viewed program.
6. S.MODE: Press to cycle through the different sound settings
7. SLEEP: Select amount of time before TV turn itself off automatically.
8. MTS: Press to search the NICAM modes.
9. P.MODE: Press to cycle through the different picture settings
10. MENU: Allow you to navigate the on-screen menus.
11. SOURCE: Open the main menu ,press to list the resources
12. AENTER: Allow you to navigate the on-screen menus and adjust the system settings to your preference.
13. EXIT: Exit from the menu or sub-menu and cancel the function in process (if applicable)
14. DISPLAY: Press to display the source and channel's info.
15. VOL+/VOL-: Press to increase /decrease the sound level.
16. TV/RADIO: When watching channel, allows you to switch between TV and Radio modes
17. GUIDE: 1. Launches the EPG (Electronic Program Guide) 2. Fast reverse in PVR or Media Player mode.
18. TIME SHIFT: 1.DTV channel time shift Function.2.play on PVR or Media Player mode.
19. CANCEL: 1. When a page is selected in the mode of text, it may take some time before it becomes available, pressing the CANCEL key will return to the TV mode. When the required page is found, the page number will appear at the top of the TV picture, press the CANCEL key to return to the mode of text for you to browse this page.2. Previous chapter in PVR or Media Player mode
20. INDEX: 1. Request the Index page in Teletext mode.2.Exit the playing function in PVR or Media Player mode.
21. SIZE: Change the size of display in Teletext mode.
22. REVEAL: Reveal or Hide the hidden words.
23. COLOR BUTTONS: Teletext switch of the analog parts, the items selection in the menu of the digital parts and the practice of the MHEG5 in the DVB menu.
24. CH+/CH-: Press to scan through channels.
25. FAV/LIST: press to open the favorite list.then you can select the favorite channel.
26. ASPECT: 1. Select picture scale.2.fast forward in PVR or Media Player mode.
27. FREEZE: press to freeze the picture
28. SUB. PG 1.Press to access sub page.2. Next chapter in PVR or Media Player mode.
29. SUBTITLE: To show and set the language of current DTV.
30. HOLD: HOLD On or Off for current page display.
31. TEXT: Switch the teletext on and off.
32. RECLIST: Show the recorded list.
33. REC: Record begin in PVR mode.

## Connecting antennae, Internet and external devices
 
### Connecting a digital audio system

You can connect your TV set to a digital audio system (e.g. amplifier, home cinema). Connect the plug at the end of a coaxial audio cable (not supplied) to the Digital Audio Out connection on your TV set.

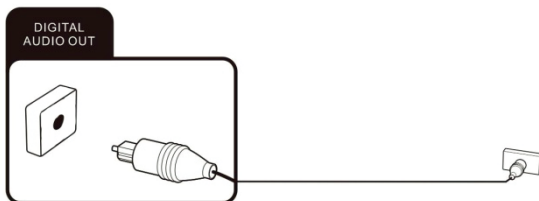

### CI card slot

If you have purchased a subscription for watching scrambled programmes with a Pay TV provider, you can insert the module with the CI or CI+ card into this slot. For more information, please read the documentation supplied with your CI card.

 


#### Caution:

Switch your TV set off before inserting or removing the CI module. Otherwise you could damage the module or the TV set.

### Inserting the CI card

Insert the module with the CI or CI+ card into the CI card slot. Make sure it is the right way around.

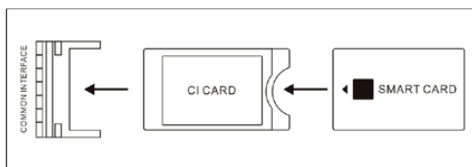

### Removing the CI card

 
To remove the CI card, carefully pull it out of the CI card slot.

The CI/CI+ module is initialised after you switch the TV set on. This may take a little while. You should then be able to view the scrambled channels. If this is not the case, consult your Pay TV provider to check that the signal has been enabled for you.

Note: If the model has a CI card slot on its top and includes a silicone plug in the packaging, please insert the silicone plug into the slot when no CI card is in use. No action required for models with a slot but without a silicone plug.


### Connecting USB device

The TV has USB 2.0 ports for connection with appropriate mass storage devices.

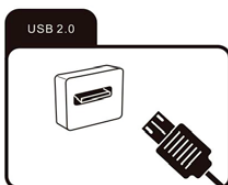


### Connecting an external device with AV output

 Connect external devices via the AV jack directly to TV by using an AV cable. In order to play the audio and video signal fed in from the external device on the TV, select the signal source "AV".

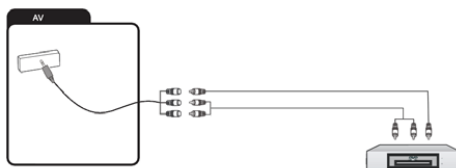

## Connecting external equipment with HDMI interface

 HDMI is the abbreviation for “High Definition Multimedia” and allows the digital transmission of both audio video signals over the same cable. In order to play the audio and video signal fed in from the external device on the TV, select the signal source as appropriate.

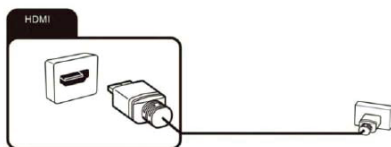

## Connecting the TV antenna or cable TV

You can connect the cable from your indoor or outdoor antenna or cable TV to the antenna socket.



## Connecting the satellite antenna

 
You can connect the cable from your satellite antenna to the ANT 2 SATELLITE socket. To switch to satellite reception, select signal source “DVB-S/S2”.



## Connecting the network cable (LAN connection)




You can also establish an internet connection via WiFi.

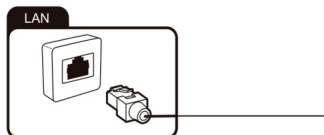

## Connecting headphones

 You can connect headphones or an analogue playback device to the socket marked with a headphones symbol. Use an audio cable with a 3.5 mm jack-type plug.

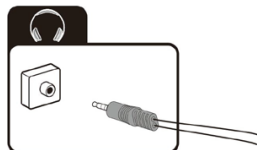

## Getting started

### Powering on

Check that the TV is in standby mode. This means the mains cable must be connected to a working mains socket. Then press the power button on the device or the  button on the remote to turn on the TV.

### Powering off

To power the TV off, either press the Power button on the device or press the  button on the remote control.

## After use Cleaning



### **Warning:**

Make sure the device is unplugged from the mains power before cleaning. Otherwise, there is a risk of electrocution!

Never spill or spray any type of liquid into the unit. Only use a clean, dry cloth for cleaning the casing. Never use aggressive liquids. When very dirty, use a slightly dampened cloth. Clean the screen with a special cleaning cloth for screens.



**Caution:** when you clean the screen, hold the device steady with one hand and carefully clean the screen with the other. Otherwise, the device could tip over and get damaged or cause injuries.

## Storage when not in use

If you do not plan to use the device for an extended period of time, unplug the power cord from the socket and remove the batteries from the remote control. Make sure that the storage temperature is between 15 °C and 45 °C and the relative humidity does not exceed 90%.

## Transport

If you wish to move the device a short distance, proceed as follows to transport the device:

1. Disconnect the device from the mains.
2. Remove all cables connected to the device.
3. If you wish to move the device outside your building, demount the base and the optional side supports or the mounted wall bracket by reversing the procedure.
4. Pack the TV set up carefully. Take special care to ensure the corners of the casing and the screen are well protected.
5. Take the TV set and its accessories to its new location and recommission it.

## Disposal of old electrical appliances



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



This product meets the requirements of EU directives on electromagnetic compatibility and electrical safety.

## Trouble-shooting

You can solve most common problems yourself using the solutions below. If the problem persists after checking the suggested solutions, please contact your reseller.

### General problems

#### **The TV set will not switch on.**

- Plug the power cable of the TV set into a working mains socket.
- Replace the batteries in the remote control.
- Unplug the plug of the power cable from the mains socket, wait approx. 30 seconds and plug the power cable back in. The device should then work normally.

#### **The remote control does not work**

- Is there an obstruction between the remote control and the sensor on the TV?
- Replace the batteries.
- Make sure that the remote control sensor is not exposed to direct sunlight.

**No picture**

- Are all the connection cables to external signal sources properly connected?
- Is the connection cable to the external signal source damaged?
- Have you selected the correct signal source on the TV set?

**TV reception problems****No picture**

- Is the antenna plugged in properly? Is the antenna cable damaged?
- Is the antenna cable plug firmly connected?
- Have you selected the correct signal source on the TV set?
- Have you already executed a channel search at your present location?

**Poor picture**

- Is the antenna plugged in? Adjust the antenna.
- Check that the channel is tuned properly.
- Adjust the picture settings, such as brightness, colour, sharpness.

**No sound**

- Is the sound muted? Press the **◀\*** button .
- Is the volume turned down? Press the **◀ +** button .

**No colour**

- Adjust the colour setting.
- Check the programme is broadcast in colour.
- Check that the channel is tuned properly.

**Multimedia playback problems****File is not played back**

- Check that the USB mass storage device contains compatible files.

**Problems with playback from external devices****No sound**

- Check that the audio cable is properly connected or damaged.
- Make sure that you have selected the correct signal source on your TV set.

**Sound is distorted or humming**

- Clean the connector plugs.
- Replace the connection cable to the external device.

# Specifications

|                                       |               |                   |
|---------------------------------------|---------------|-------------------|
| Model                                 |               | 32HLE4000S        |
| Screen Size                           |               | 32" (80cm)        |
| Resolution                            |               | 1366 x 768        |
| Brightness (cd/m)                     |               | 200               |
| Contrast ratio                        |               | 3000:1            |
| Aspect Ratio                          |               | 16:9              |
| Viewing angle                         |               | 178/178           |
| Power Input                           |               | 100-240V~ 50/60Hz |
| VESA                                  |               | 200x100 mm        |
| Dimensions, mm                        | Without stand | 715.2×58.7×420.9  |
|                                       | With stand    | 715.2×131.9×470.6 |
| Weight, kg                            | With stand    | 3.82              |
| Energy efficiency class               |               | E                 |
| Energy consumption in working mode, W |               | 26                |
| Annual consumption, kW*h/1000h        |               | 38                |
| Power consumption in standby mode, W  |               | 0.5               |

**Note:** The technical data and design may be changed without prior notice. All the pictures in this user manual are for illustrative purposes only and may be used for reference. Depending on the model, the actual product shall prevail.



**EN**-Register your product and get support and warranty;  
**DE**-Registrieren Sie Ihr Produkt und erhalten sie support und garantie;  
**CZ**-Zaregistrujte svůj produkt a získejte podporu a záruku;  
**PL**-Zarejestruj swój produkt i uzyskaj wsparcie i gwarancję;  
**SK**-Zaregistrujte svoj produkt a získajte podporu a záruku;  
**HU**-Regisztrálj a termékét, és kérjen támogatást és garanciát;  
**IT**-Registra il tuo prodotto e ottieni supporto e garanzia;  
**RO**-Înregistrați-vă produsul și obțineți asistență și garanție;  
**UA**-Зареєструйте свій продукт та отримайте підтримку та гарантію.

## **EN** Information about warranty, servise and certification

The service life of the product is 5 years. The consumer warranty period is 2 years. At the end of its service life, contact service center if necessary. The products have the appropriate certification that does not contain harmful substances in accordance with the rules and technical regulations. You can get online support, view customization videos, find the customer support services and other useful information on web site: <https://service.uniondistribution.eu> or on our YouTube Channel: <https://www.youtube.com/@udservice>. Additional product information, certificates and declarations can be found at the web site: <https://blaupunkt.com/>.

## **CZ** Informace o záruce, servisu a certifikaci

Životnost výrobku je 5 let. Spotřebitelská záruční doba je 2 roky. Po skončení životnosti kontaktujte v případě potřeby servisní středisko. Výrobky mají příslušnou certifikaci, která neobsahuje škodlivé látky v souladu s pravidly a technickými předpisy. Online podporu, prohlížení videí o přizpůsobení, služby zákaznické podpory a další užitečné informace můžete získat na webových stránkách: <https://service.uniondistribution.eu> nebo na našem kanálu YouTube: <https://www.youtube.com/@udservice>. Další informace o produktu, certifikáty a prohlášení naleznete na webové stránce: <https://blaupunkt.com/>.

## **SK** Informácie o záruke, servise a certifikácii

Životnosť výrobku je 5 rokov. Spotrebiteľská záručná doba je 2 roky. Po skončení životnosti sa v prípade potreby obráťte na servisné stredisko. Výrobky majú príslušnú certifikáciu, ktorá neobsahuje škodlivé látky v súlade s pravidlami a technickými predpismi. Môžete získať online podporu, pozrieť si videá o prispôsobení, najst služby zákaznickej podpory a ďalšie užitočné informácie na webovej stránke: <https://service.uniondistribution.eu> alebo na našom kanáli YouTube: <https://www.youtube.com/@udservice>. Ďalšie informácie o produkte, certifikáty a vyhlásenia nájdete na webovej stránke: <https://blaupunkt.com/>.

## **PL** Informacje o gwarancji, serwisie i certyfikacji

Żywotność produktu wynosi 5 lat. Okres gwarancji konsumenckiej wynosi 2 lata. Po zakończeniu okresu użytkowania należy w razie potrzeby skontaktować się z centrum serwisowym. Produkty posiadają odpowiednie atesty i nie zawierają substancji szkodliwych zgodnie z przepisami i przepisami technicznymi. Możesz uzyskać pomoc online, obejrzeć filmy dotyczące dostosowywania, znaleźć usługi obsługi klienta i inne przydatne informacje na stronie internetowej: <https://service.uniondistribution.eu> lub na naszym kanale YouTube: <https://www.youtube.com/@udservice>. Dodatkowe informacje o produktach, certyfikatach i deklaracjach można znaleźć na stronie internetowej: <https://blaupunkt.com/>.

## **IT** Informazioni su garanzia, assistenza e certificazione

La durata del prodotto è di 5 anni. Il periodo di garanzia per il consumatore è di 2 anni. Al termine della sua vita utile, contattare il centro assistenza, se necessario. I prodotti hanno l'apposita certificazione che non contengono sostanze nocive secondo le norme e le normative tecniche.

Puoi ottenere supporto online, visualizzare video di personalizzazione, trovare i servizi di assistenza clienti e altre informazioni utili sul sito web: <https://service.uniondistribution.eu> o sul nostro canale YouTube: <https://www.youtube.com/@udservice>. Ulteriori informazioni sul prodotto, certificati e dichiarazioni sono disponibili sul sito web: <https://blaupunkt.com/>.

## **RO** Informații despre garanție, service și certificare

Durata de viață a produsului este de 5 ani. Perioada de garanție a consumatorului este de 2 ani. La sfârșitul duratei de viață, contactați centrul de service dacă este necesar. Produsele au certificarea corespunzătoare care nu conține substanțe nocive în conformitate cu regulile și reglementările tehnice.

Puteți obține asistență online, vizualiza videoclipuri de personalizare, găsiți serviciile de asistență pentru clienți și alte informații utile pe site-ul web: <https://service.uniondistribution.eu> sau pe canalul nostru YouTube: <https://www.youtube.com/@udservice>. Informații suplimentare despre produs, certificate și declarații pot fi găsite pe site-ul web: <https://blaupunkt.com/>.

## **HU** Információ a garanciáról, a szervizről és a tanúsításról

A termék élettartama 5 év. A fogyasztói garancia időtartama 2 év. Élettartamának végén szükség esetén forduljon a szervizközponthoz. A termékek a szabályoknak és a műszaki előírásoknak megfelelő, káros anyagokat nem tartalmazó tanúsítvánnyal rendelkeznek.

Online támogatást kaphat, tesztesztelési videókat tekinthet meg, ügyfélszolgálati szolgáltatásokat és egyéb hasznos információkat találhat a következő webhelyen: <https://service.uniondistribution.eu> vagy YouTube csatornánkon: <https://www.youtube.com/@udservice>. További termékinformációk, tanúsítványok és nyilatkozatok a következő weboldalon találhatóak: <https://blaupunkt.com/>.

# SUGGESTION

## EN:

To make it more convenient for base installation and to avoid any risk of scratches and damage, we advise you using the type of PH2 screwdriver.

## CZ:

Aby se vám základna lépe šroubovala a vyhnuli jste se nebezpečí zkratu a poškození, použijte šroubovák typu PH2.

## SK:

Aby bolo priskrutkovanie ku základni čo najpohodlnejšie a aby ste predišli riziku poškriabania a škôd, použite skrutkovač typu PH2.

## PL:

Aby wygodniej można było przykręcić podstawę i uniknąć ryzyka zarysowania i uszkodzenia, należy użyć śrubokręta typu PH2.

## IT:

 
Per rendere più conveniente per avvitare la base, ed evitare il rischio di graffi e danni, si prega di utilizzare il tipo di PH2 cacciavite.

## RO:

Pentru a ușura înșurubarea bazei și pentru a evita riscul de zgârieturi și deteriorări, vă rugăm să utilizați o șurubelniță Phillips (PH2).

## HU:

Az alap csavarozásának leegyszerűsítése, valamint a karcok és sérülések kockázatának elkerülése érdekében használjon PH2 típusú csavarhúzó.

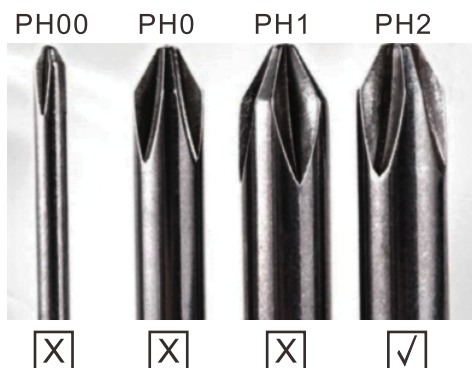

EN Wall-mounted screw: 22-24 inch M4, 28-75 inch M6, 77 inch M8, 85 inch M6, 100 inch M8

Note: don't hang at an angle to avoid the risk of falling off.

CZ Nástěný šroub: 22-24 palců M4, 28-75 palců M6, 77 palců M8, 85 palců M6, 100 palců M8.

Poznámka: nezavěšujte pod úhlem, abyste se vyhnuli riziku pádu.

SK Skrutka namontovaná na stenu: 22-24 palcov M4, 28-75 palcov M6, 77 palcov M8, 85 palcov M6, 100 palcov M8.

Poznámka: nedržte pod uhlom, aby ste predišli riziku pádu.

PL Śruba naścienna: 22-24 cale M4, 28-75 cali M6, 77 cale M8, 85 cali M6, 100 cale M8.

Uwaga: nie zawieszaj pod kątem, aby uniknąć ryzyka upadku.

IT Vite a parete: 22-24 pollici M4, 28-75 pollici M6, 77 pollici M8, 85 pollici M6, 100 pollici M8,

Nota: non appendere ad angolo per evitare il rischio di cadere.

RO Șurub de montat pe perete: 22-24 inci M4, 28-75 inci M6, 77 inci M8, 85 inci M6, 100 inci M8.

Notă: nu atârnați în unghi pentru a evita riscul căderii.

HU Falra szerelhető csavar: 22-24 hüvelyk M4, 28-75 hüvelyk M6, 77 hüvelyk M8, 85 hüvelyk M6, 100 hüvelyk M8.

Megjegyzés: ne lógjon ferdén, hogy elkerülje a leesés veszélyét.

